

WS Plus console assembly instructions (8 – 9”)


Item number: 1201005

Inlet side

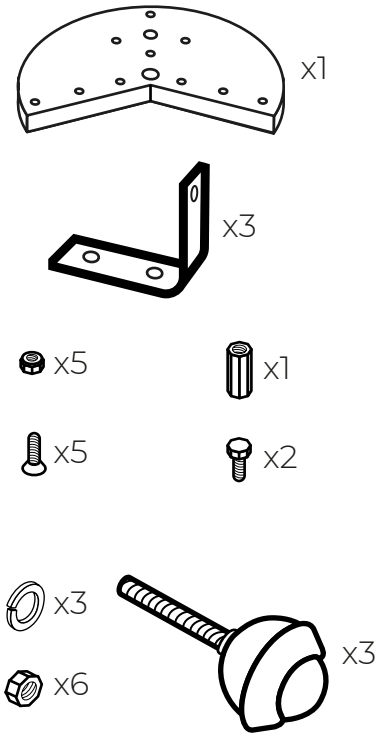

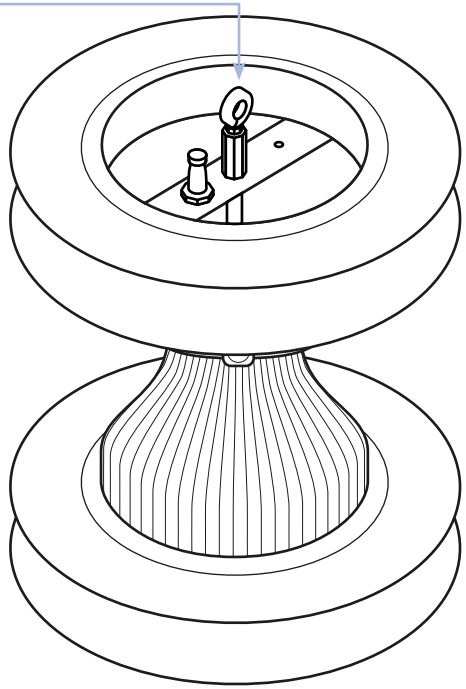


Outlet side

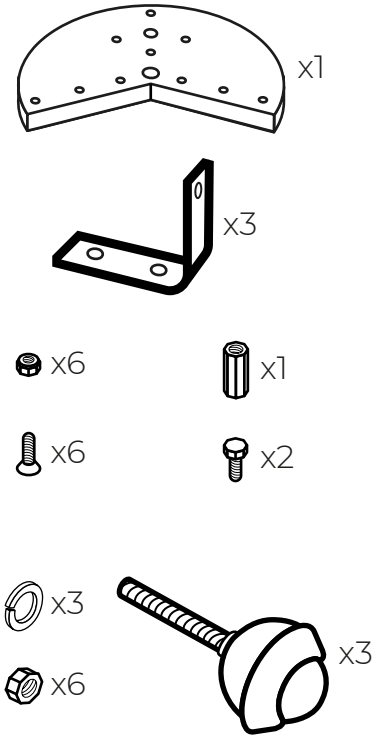


Needed tools: Phillips screwdriver, 8 mm wrench, 10 mm wrench, 6,5 mm drill

1 *(Inlet side)*

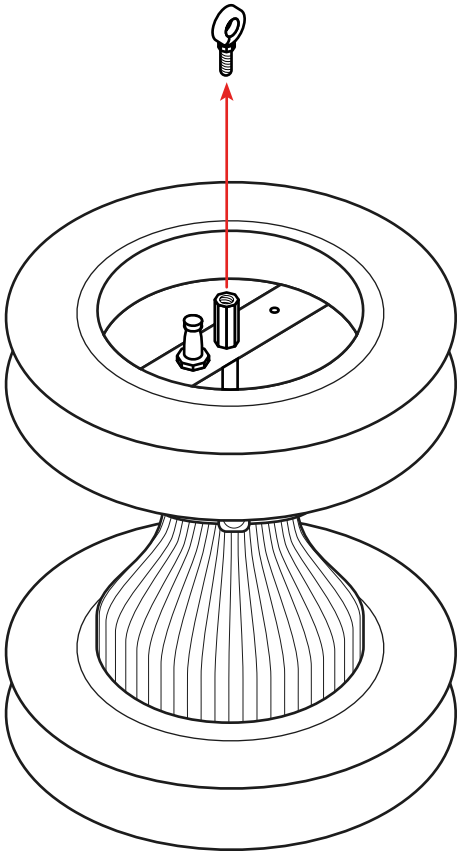

2



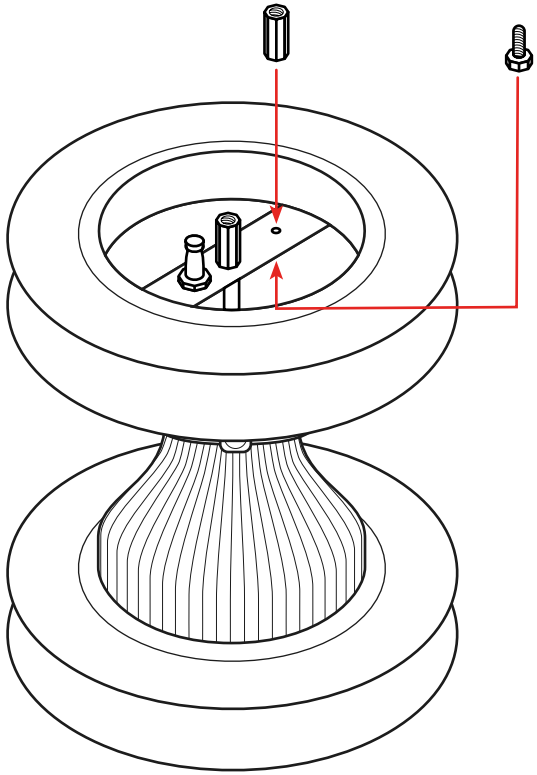


ANKER ENGELUNDS VEJ 6 I DK-9200 AALBORG SV I DENMARK I TEL. +45 96 34 21 21 I WWW.SCHNORRER.DK


3


x5 x5 x3 x1

4

O will need to be expanded to 6,5 mm

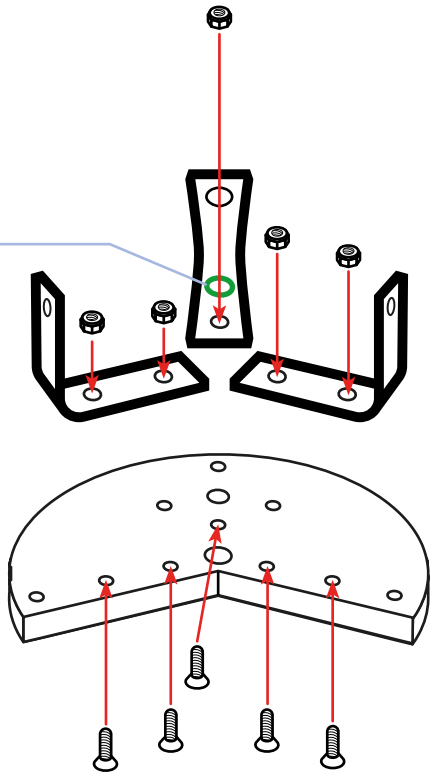


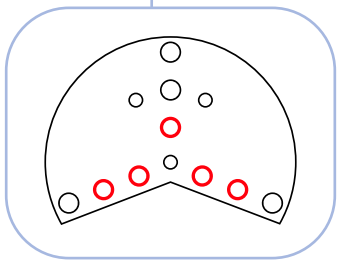

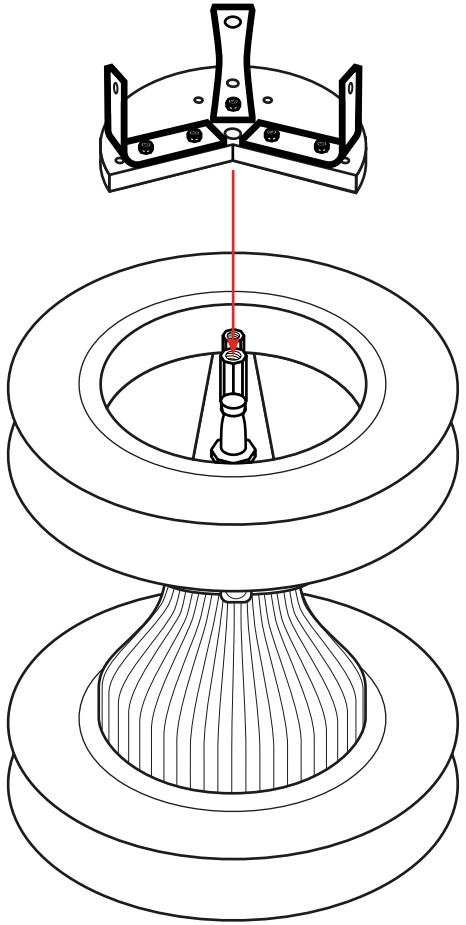


5

x1 x1

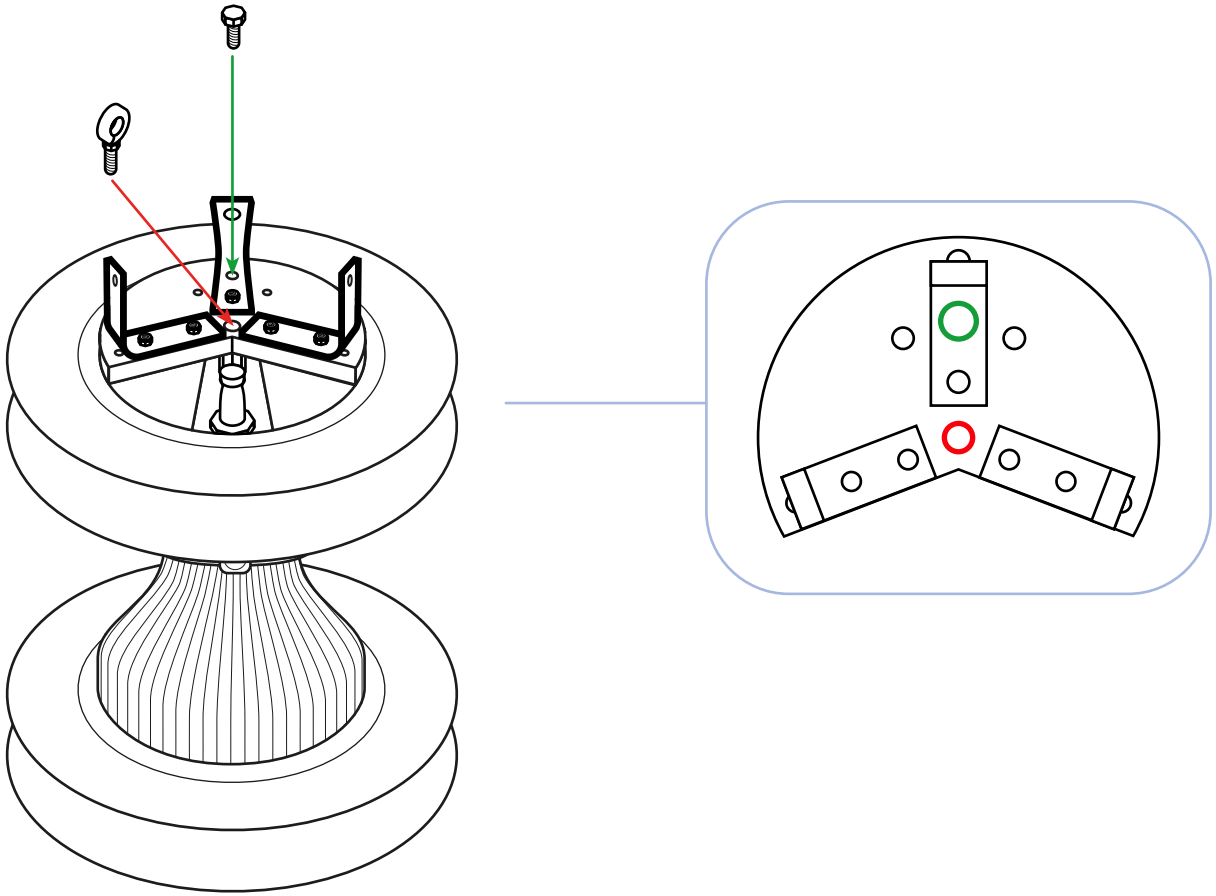


ANKER ENGELUNDS VEJ 6 I DK-9200 AALBORG SV I DENMARK I TEL. +45 96 34 21 21 I WWW.SCHNORRER.DK

6

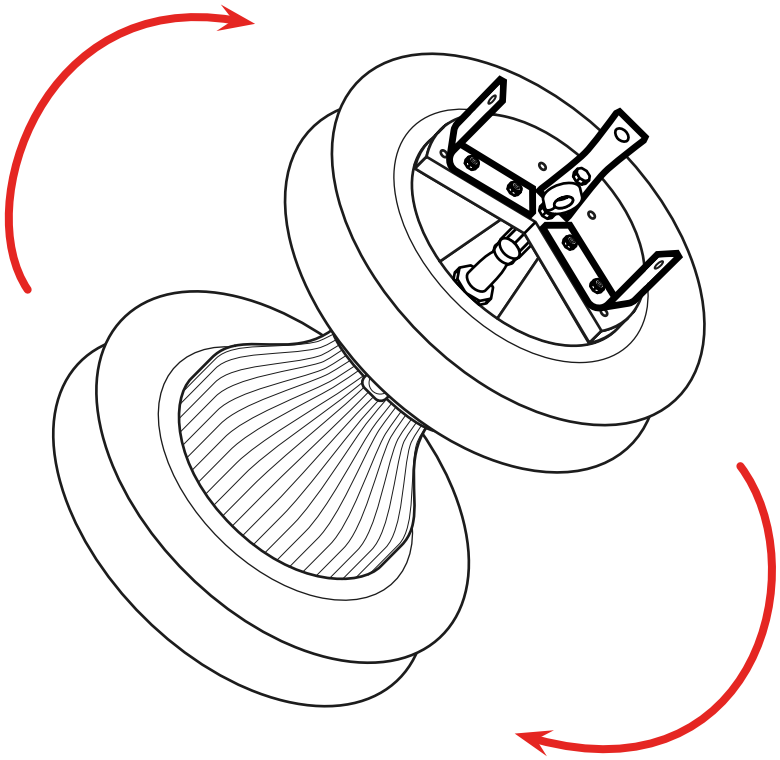


7


x1 x1 *(Outlet side)*

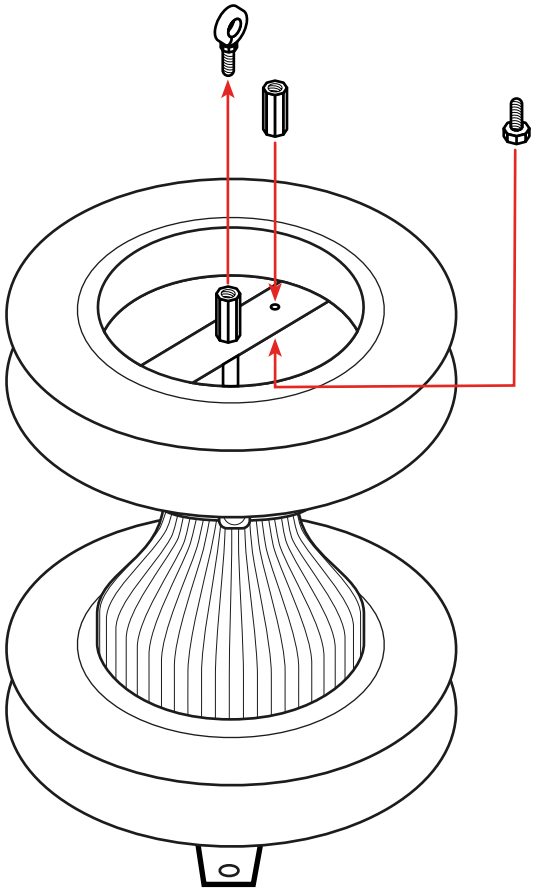

8


x6 x6 x3 x1

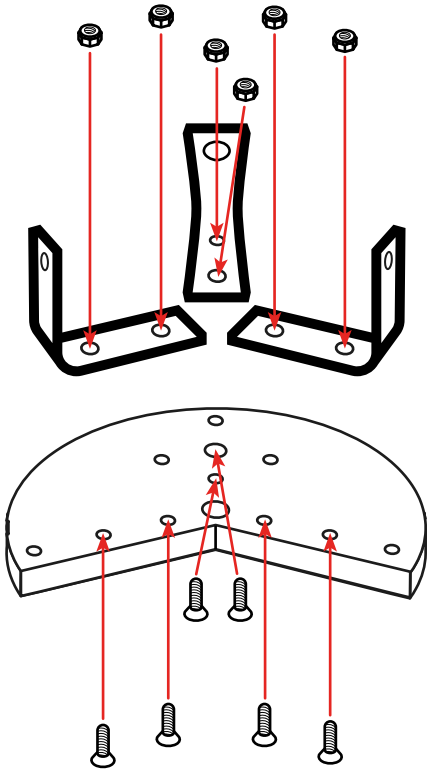


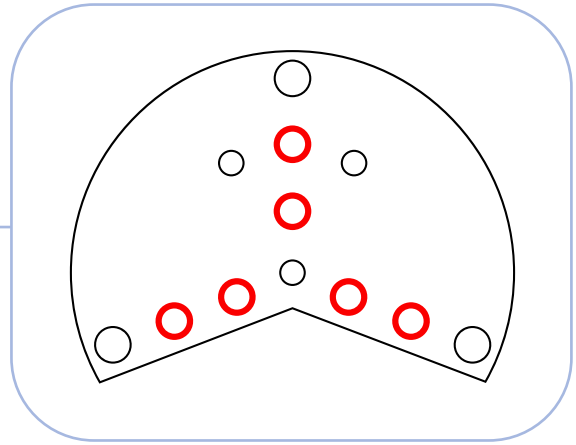

ANKER ENGELUNDS VEJ 6 I DK-9200 AALBORG SV I DENMARK I TEL. +45 96 34 21 21 I WWW.SCHNORRER.DK

9

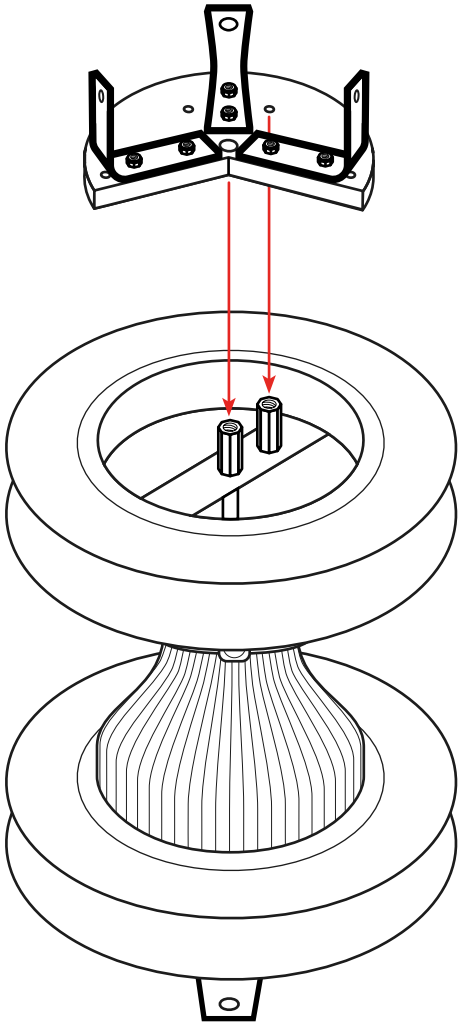


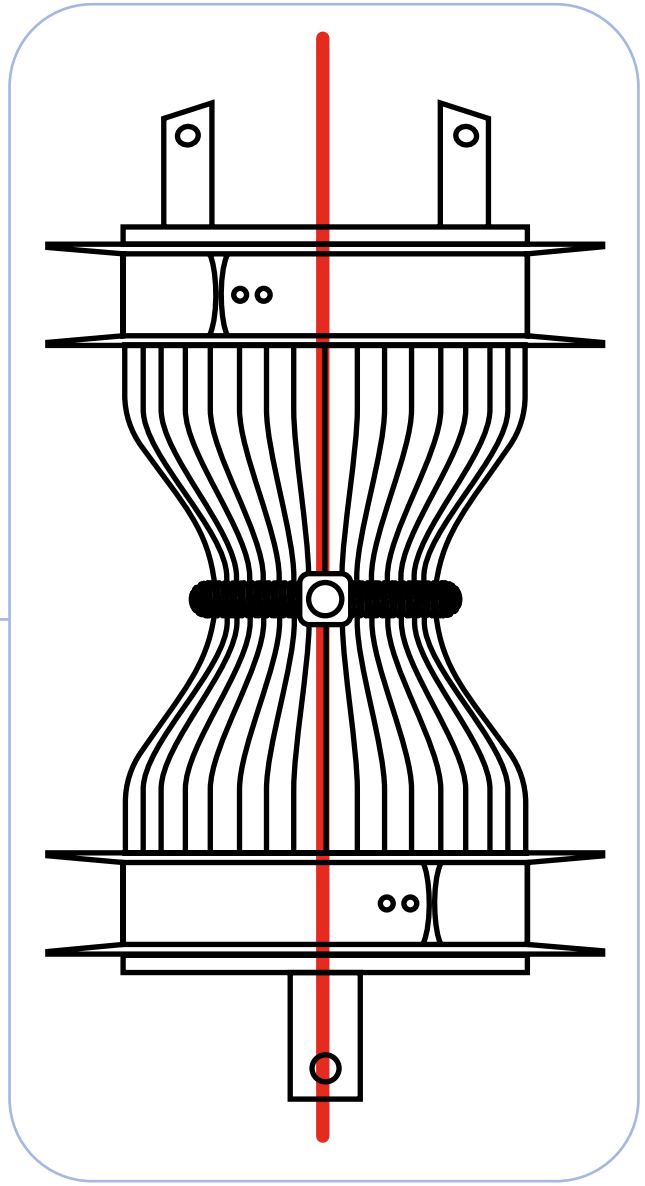


The consoles MUST NOT align

10

x1 x1

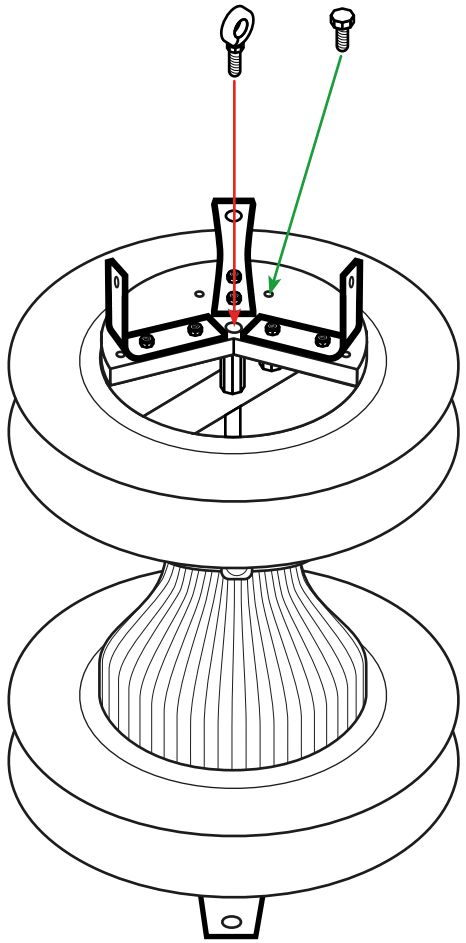

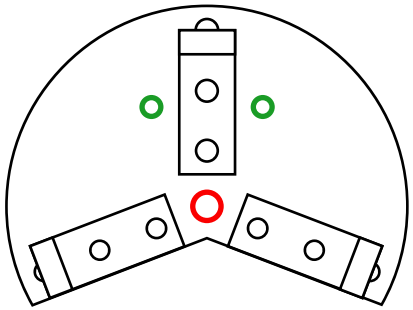

Either O works. What is important is that the consoles do NOT align (see step 9)


ANKER ENGELUNDS VEJ 6 I DK-9200 AALBORG SV I DENMARK I TEL. +45 96 34 21 21 I WWW.SCHNORRER.DK

11

 x12

 x6


 x6

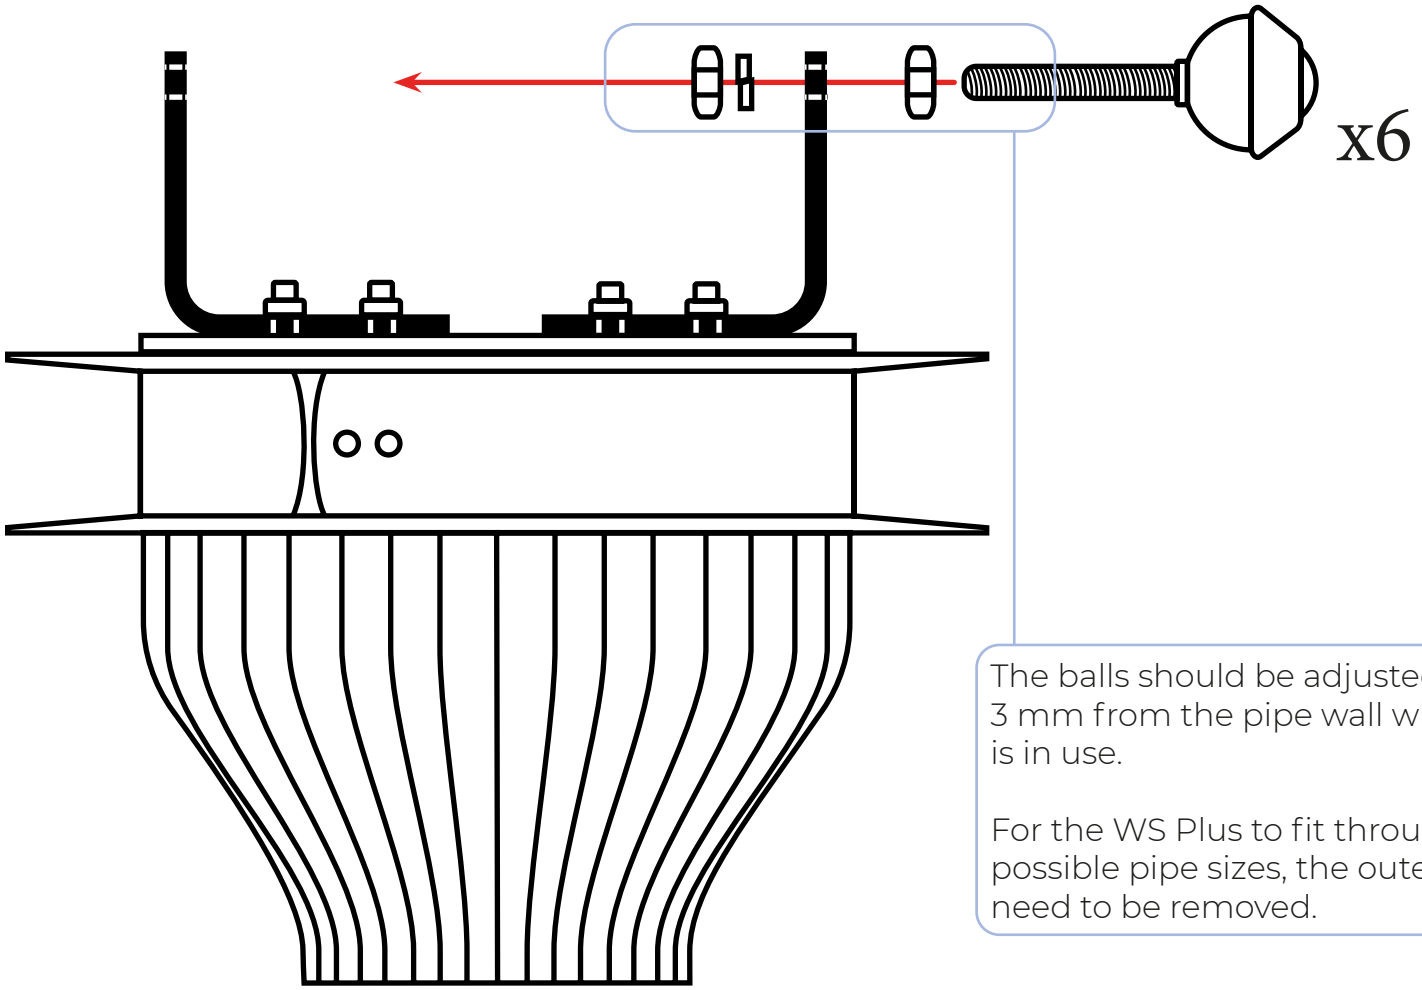

The balls should be adjusted so that they are 3 mm from the pipe wall when the WS Plus is in use.

For the WS Plus to fit through the smallest possible pipe sizes, the outermost nut may need to be removed.

12

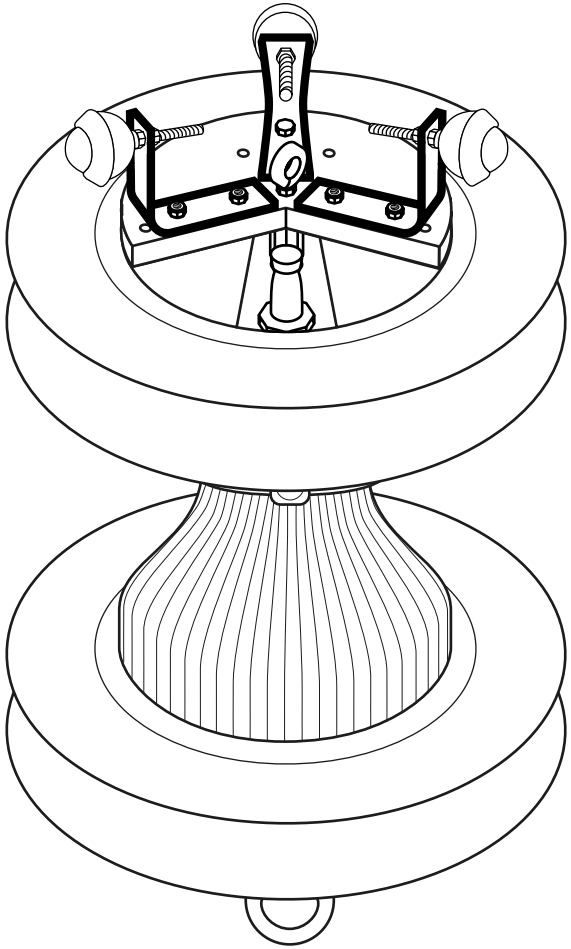

ANKER ENGELUNDS VEJ 6 I DK-9200 AALBORG SV I DENMARK I TEL. +45 96 34 21 21 I WWW.SCHNORRER.DK